 


User Manual



Please read this manual carefully before using this product and store it properly.

 
01. Inside Box

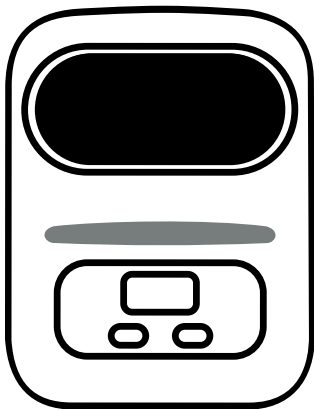


Printer *1



User manual *1



USB data wire *1

 


Adjustable plate *1

If anything is missing, please contact the supplier.

02. Product Description

 - ① Paper Exit
- ② Screen
- ③ Power Button
- ④ Feed Button
- ⑤ Rope Hole
- ⑥ USB
- ⑦ Reset Hole

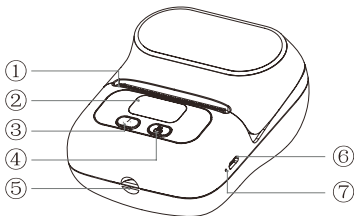

Turn On/Off

(1) Press Power Button  for 2 seconds to turn on the printer.

(2) To turn it off, please press the Power Button  for 2 seconds.

Feed:

(1) Label paper: Press Feed Button  to feed the tape to the proper place and get ready for printing next tape.

(2) Continuous paper: Press Feed Button  to keep paper feeding, it will stop when you let go of the button.

 
System Setting:

(1) Press Power Button  for 1 second to switch to the setting interface.

(2) Press Feed Button  for 1 second, scroll option list and select by pressing Power Button.

(3) Press Power Button  for 2 seconds to go back to the main page.

03. Screen Information

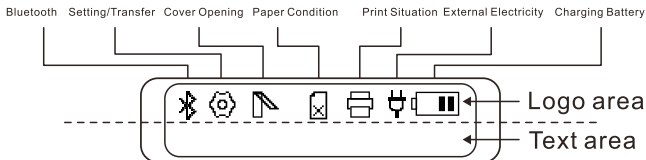



Logo guidance

Bluetooth

When printer connects to Bluetooth, this logo will be light up. This logo will flash when the data is transferring.

Setting/Transfer

When you are using USB wire, this logo will be shown as ; If you press Power Button for a short time, it will be switched to Setting Mode, the logo will be shown as Setting Mode .

Cover Opening

It indicates that the paper cover is opened or not closed correctly. A message will appear, stating that the paper cover is opened.

Paper Condition

If the paper roll is not installed correctly, or there is insufficient paper, this logo will light up. A message will appear, stating that there is no paper. When the paper is detected, it will give you a confirmation so that you are able to proceed.

Print Condition

It will light up while the printer is printing or feeding.

External Electricity

It will light up when the printer is connected to a power source.

Charging Battery

Please charge your printer when the power display begins to flash.

Text Area

This area shows related text information.

Screen setting

Options	Parameter
Language	English, Chinese
Print concentration	1(Lightest),2,3,4(Light),5,6(Normal),7,8,9,10(Thick), 11,12,13,14,15(Thickest)
Print speed	1(Slowest),2(Slow),3(Normal),4(Fast),5(Fastest)
Paper type	Interstitial paper, Continuous paper
Automatic shutdown	5min,15min,30min,1h,2h,4h,8h,24h, No shutdown
Restore settings	Press power button to restore
Firmware version	Display Firmware version
Device address	Display device address

Screen hint

Content	Condition
Shutdown...	Battery lower than 1%
Printing...	Printing regularly
Feeding...	Press Feed button
Overheated,please wait...	Print head is overheated
No paper detected...	No paper in the bin or paper is installed incorrectly
Cover opened...	The paper cover is opened

04. Device Parameters


Hardware	Name:	Smart label printer
	Model:	M110
	Print technology:	Direct thermal
	Maximum print width:	20-50mm
	Types of tape:	Thermosensitive label, thermosensitive continuous paper
	Label size:	57mm X ϕ 50mm (Max width X Max diameter)
	Print speed:	20-45mm/s (switchable, level 1-5)
	Print concentration:	switchable, level 1-15
	Print resolution:	203 dpi
	Life of print head:	50KM
	Connection type:	Bluetooth 4.0
		Micro USB
	Battery:	1500mAh
	Printer size:	4.5 X 3.4 X 2.5in.
	Input:	5V--- 2A
Power supply mode:	Micro USB	
	Lithium battery	
Operating Information	Operating system:	Windows 7/8/10
		Android
		iOS
	Instruction set:	ESC/POS
	Bar code:	1D bar code & 2D bar code
	Operating temperature:	0°C - 50°C
	Storage temperature:	-20°C-60°C
	Operating humidity:	20% - 85%
Storage humidity:	5% - 95%(Non condensation)	

05. Search Print master on App Store or Google Play to Get the App




06. Installing the Paper Roll

 ①

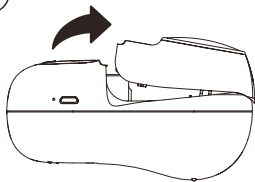

Hold the printer and lift the paper cover

 ②

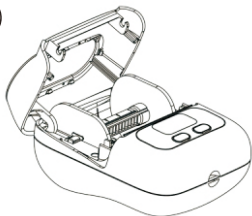


Take out the adjustable plate and remove the left panel

③




 Pass the paper between A and B

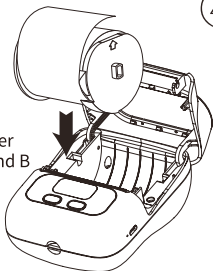


Put in the paper roll (The print side should be below) and push it to the right (Dividing ruler should be above; Note the position of the paper roll device as shown)

 ④

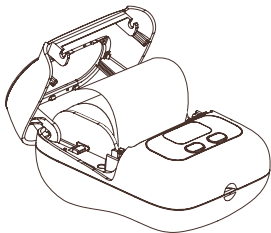


Aim the adjustable plate at both slots and slowly put into the paper bin.

 ⑤

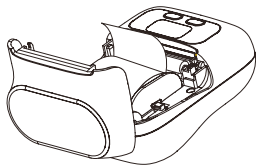

Pull out the paper (Raise the paper out of the paper bin by approximately 15mm) and close the paper cover, make sure the paper bin is closed.

 ⑥

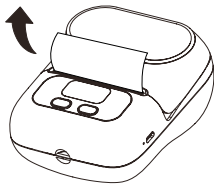

Press Power button for 2 sec to turn on the printer, press feed button to push one piece of plate. Connect to the App, start to use it.

07. Product Warranty Description

Thank you for choosing Printmaster.

- ① The free warranty period is 1 year from the date of purchase.
- ② Within 30 days from the date of user's receipt, the user can choose to return.

08. Non-warranty Regulations

The warranty is void under the following conditions:

- ① Exceeding the warranty period.
- ② Not presenting the original warranty/maintenance card .
- ③ Presenting a damaged warranty/maintenance card (e.g.tearing or tampering), altering product information.
- ④ Damage caused by unauthorized repair, disassembling,etc.
- ⑤ Damage caused by human error.
- ⑥ Damage caused by natural disasters such as earthquakes, floods, windstorms, lightning strikes, or external disasters such as fires and house collapses.
- ⑦ Failure or damage caused by harsh conditions (oil, dust, moisture, direct sunlight etc.) or failure to use or care for as outlined by the instruction manual.

09. Warranty/Maintenance Card

Replace

Return

Repair

User Information	Name: Gender: Phone:
	Address:
Product Information	Date of purchase:
	Product order number:
	Product serial number:
Reason for Return: (Replace/Repair/Request Maintenance)	Fault description:
Maintenance Records:	Fault conditions: Maintenance staff:
	Processing situation: Repair date:
	Repair ticket number: Date of inspection: